COOKTOP PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

30" ELECTRIC FREESTANDING
SELF CLEAN RANGE

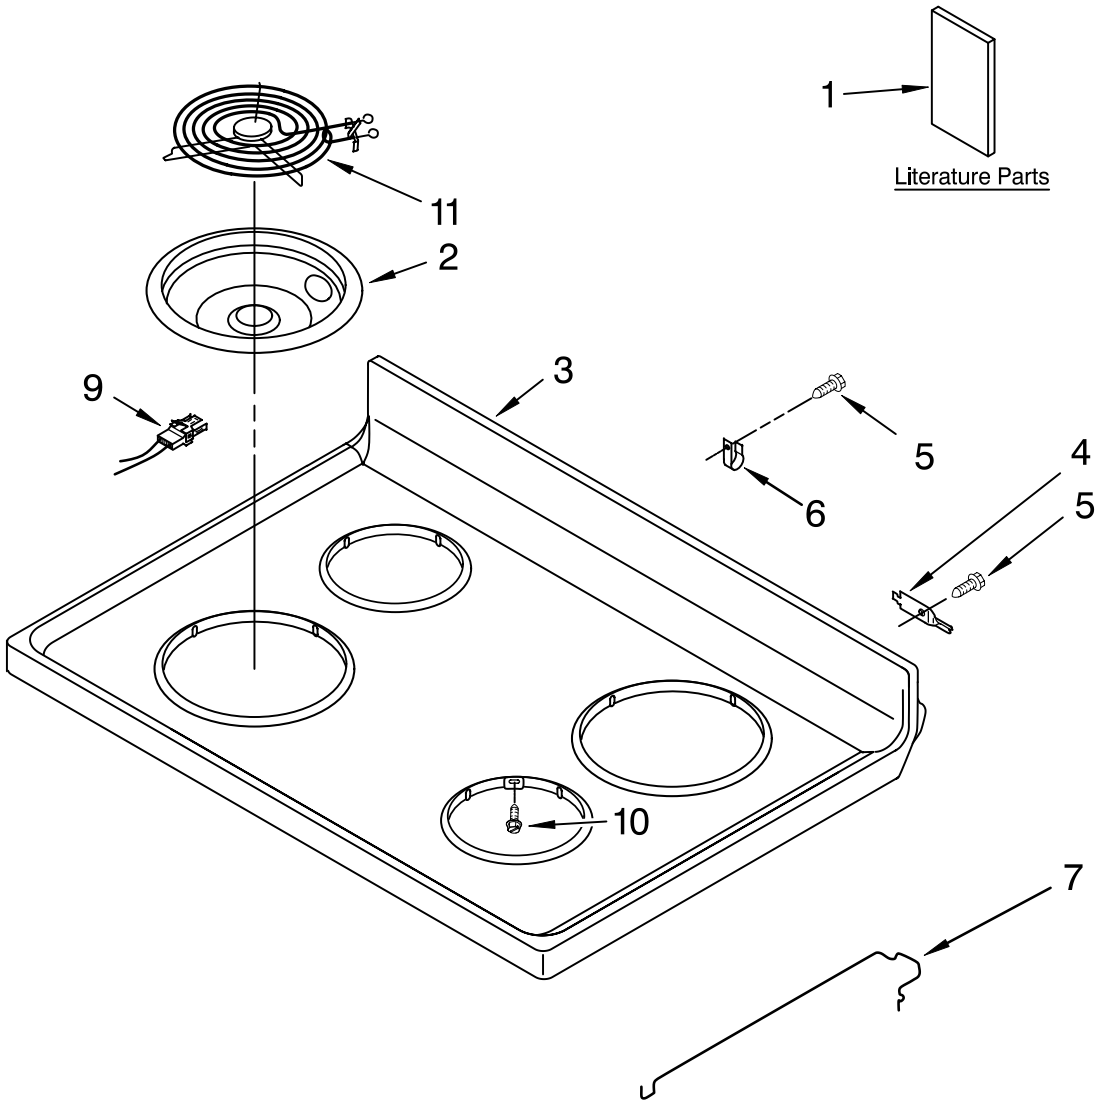

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9763001	Owners Manual
	9762976	Tech Sheet
	9762996	Instructions, Installation Template, Anti−Tip
	9757142	English/Spanish
	9757143	English/French
	9762761	Safer Cooking Tips

Illus. No.	Part No.	DESCRIPTION
2		Bowl, Drip
	3196206	6" Gray
	3196207	8" Gray
	3196202	6" Black
	3196203	8" Black
	8522881	6" Espresso
	8522882	8" Espresso
3		Cooktop
	3186231	White
	8272527	Biscuit
	3186233	Black

Illus. No.	Part No.	DESCRIPTION
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
	9761347	6" (2)
	9761345	8" (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

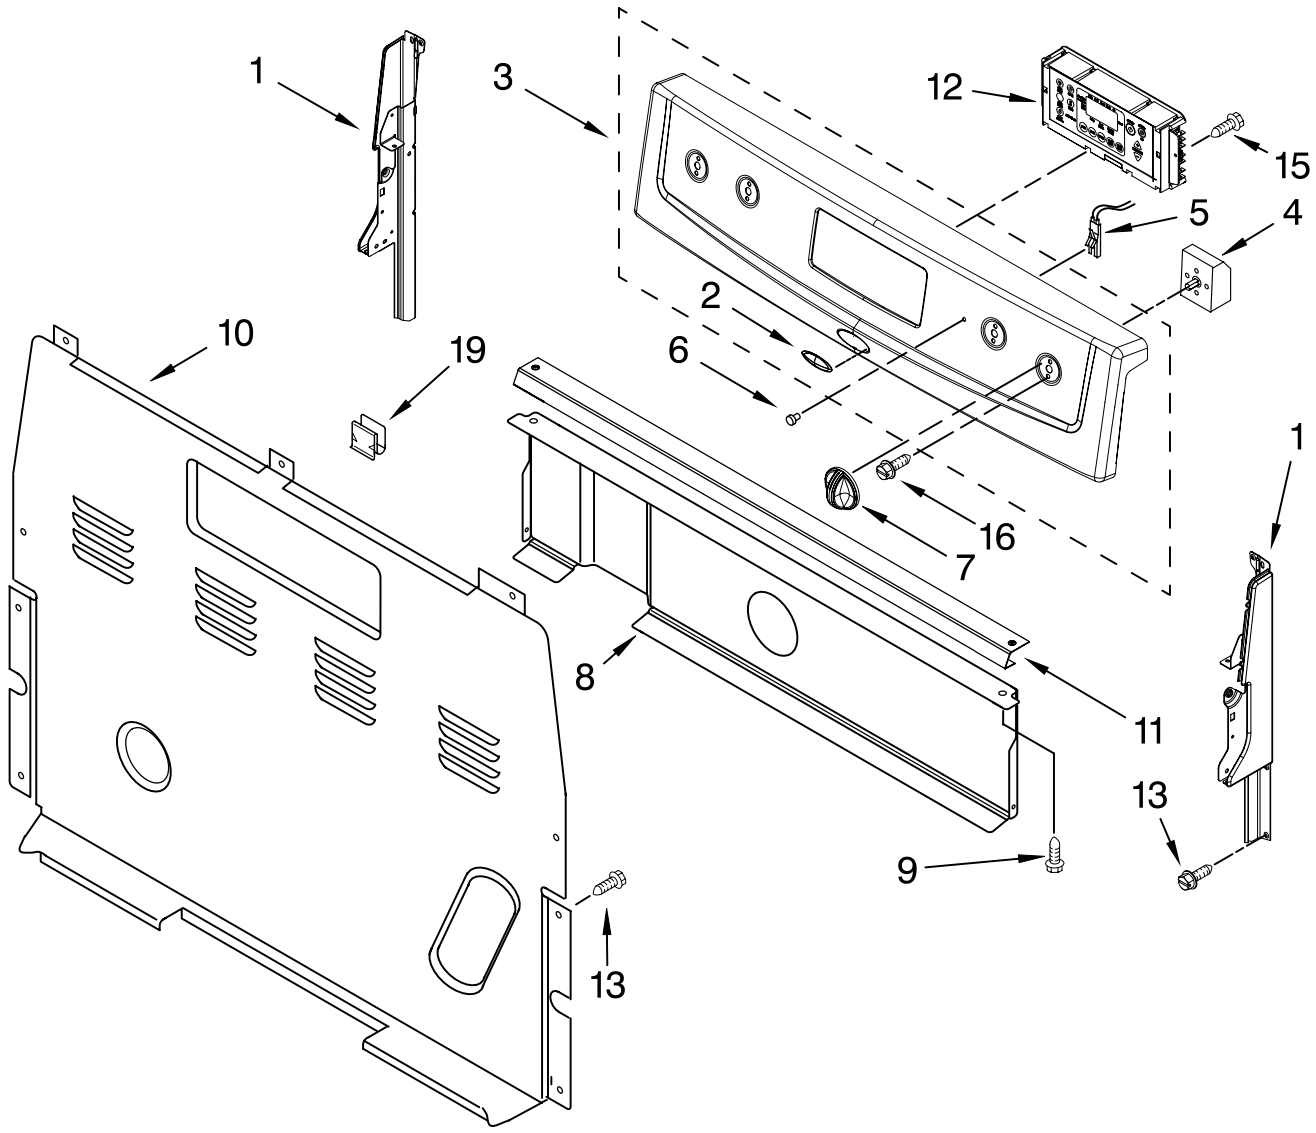

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9757609	Nameplate
3		Panel, Control
	9762083	Black
	9762081	White
	9762082	Biscuit

Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148954	Left Front
	3148952	Left Rear
	3148954	Right Rear
	3148952	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9761964	Black
	9761962	White
	9761963	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	8053912	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
11	9762095	Brkt−Mntg,Console
12		Control, Range
	9762185	Black
	9762184	White
	9762186	Biscuit
13	3196178	Screw
15	3196169	Screw
16	3400882	Screw
19	3196200	Clip

CHASSIS PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

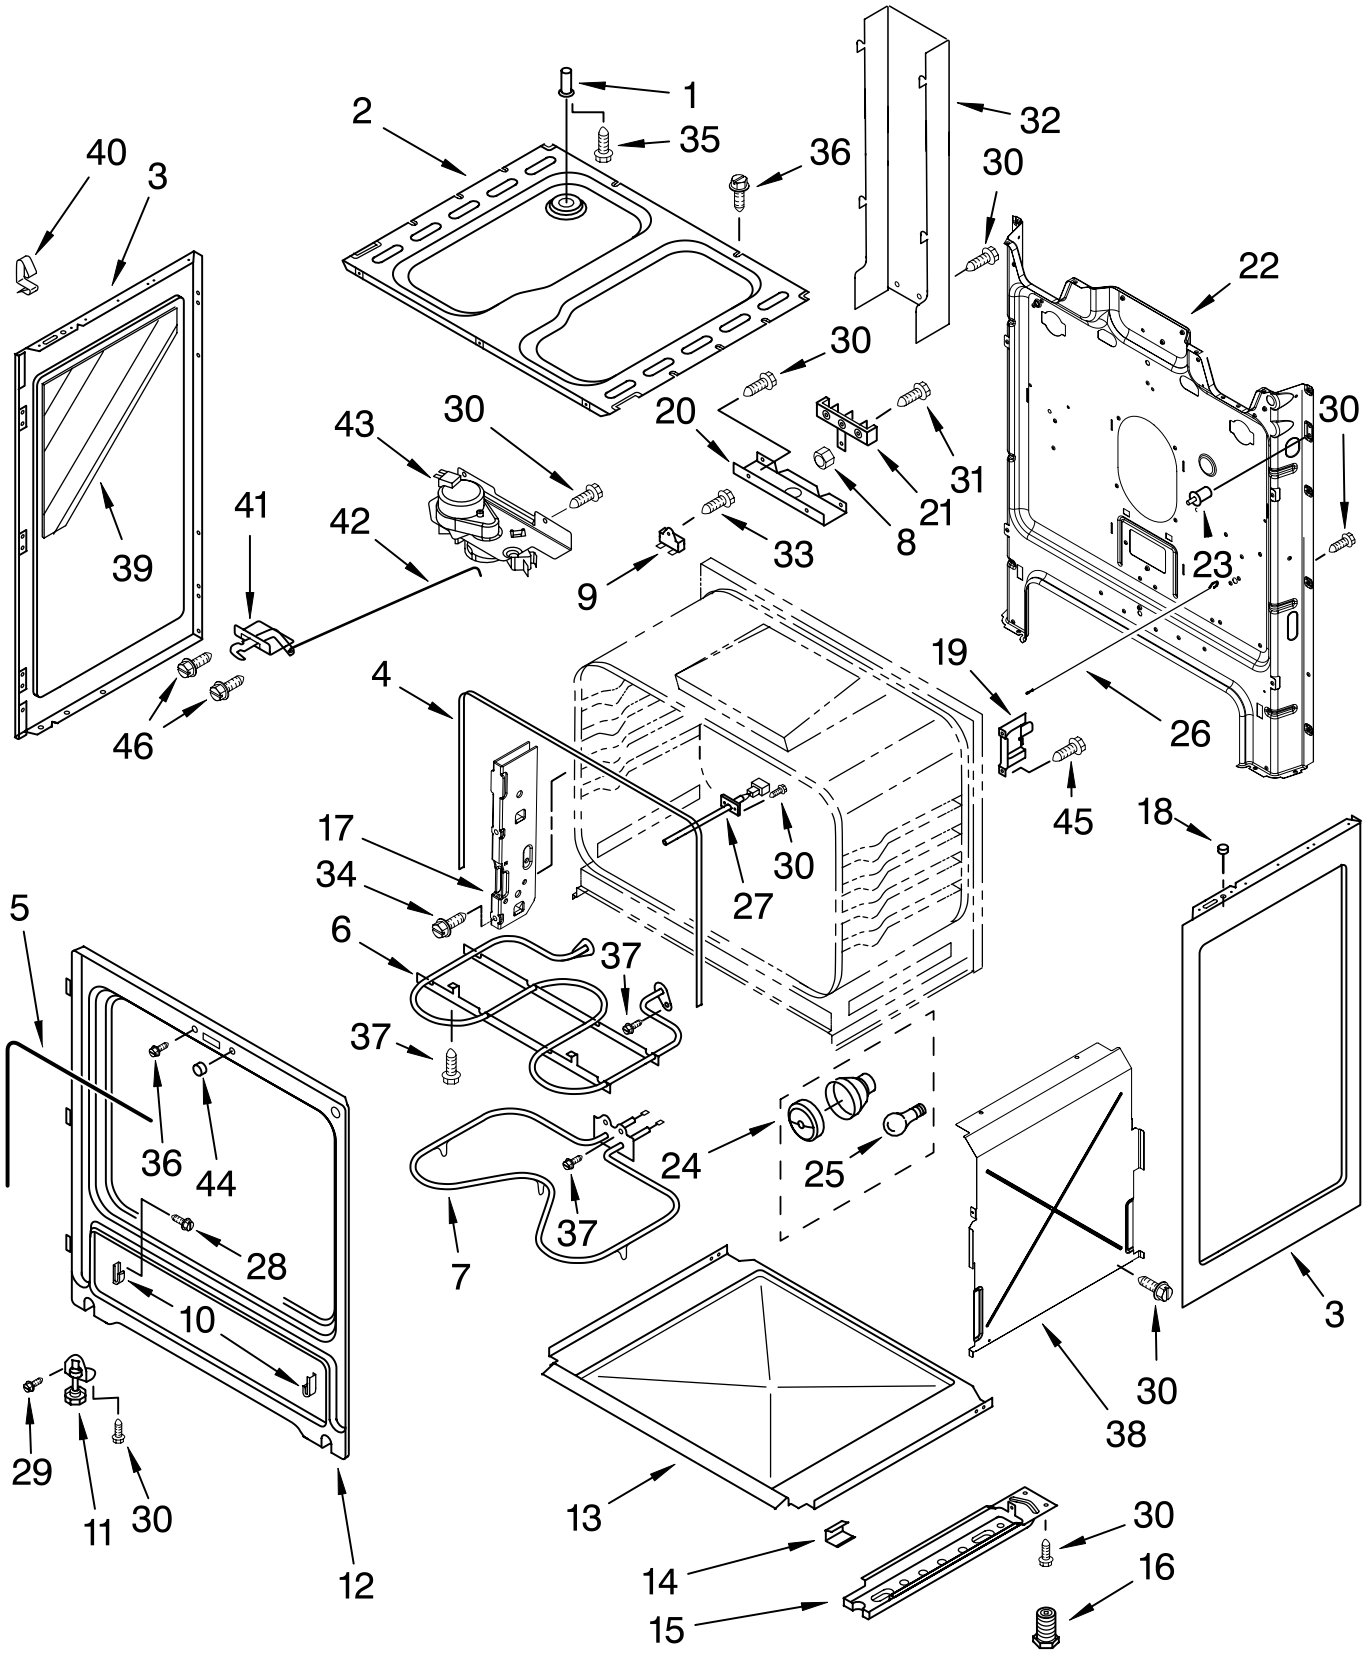

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

Illus. No.	Part No.	DESCRIPTION
1	9755804	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White−Textured
	8272519	Biscuit−Textured
	8053832	Black
4	W10010350	Seal, Oven Flange
5	8522416	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	112432	Nut (3)
9	3196548	Fuse, Thermal
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Not Serviced)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
17	9760407	Brkt−Mntg,Dr Hinge
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9757239	Rod, Door Switch Rear Mount
27	8273902	Sensor, Oven
28	3196165	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
33	3196172	Screw
34	W10031780	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	9758238	Retainer, Side (2)
39	9761490	Insulation
40	3195813	Clip, Mounting
41	9761013	Latch, Door
42	3196961	Rod, Latch
43	9757241	Latch Asy, Rear
44	9758701	Spacer, Door
45	3196169	Screw
46	3196560	Screw (2)

INSULATION

8272616	Insulation, Wrap
8272612	Insulation, Back

DRAWER & BROILER PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

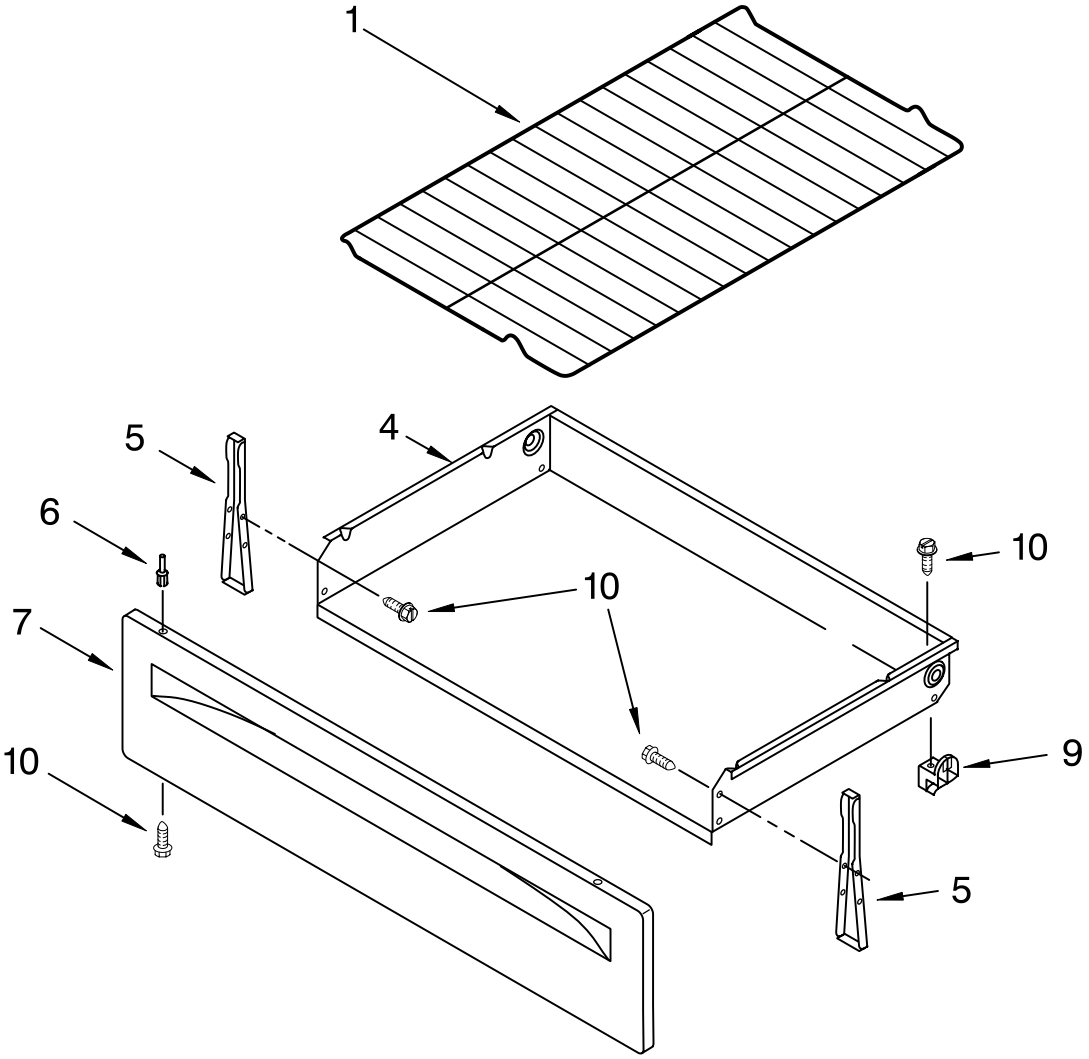

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

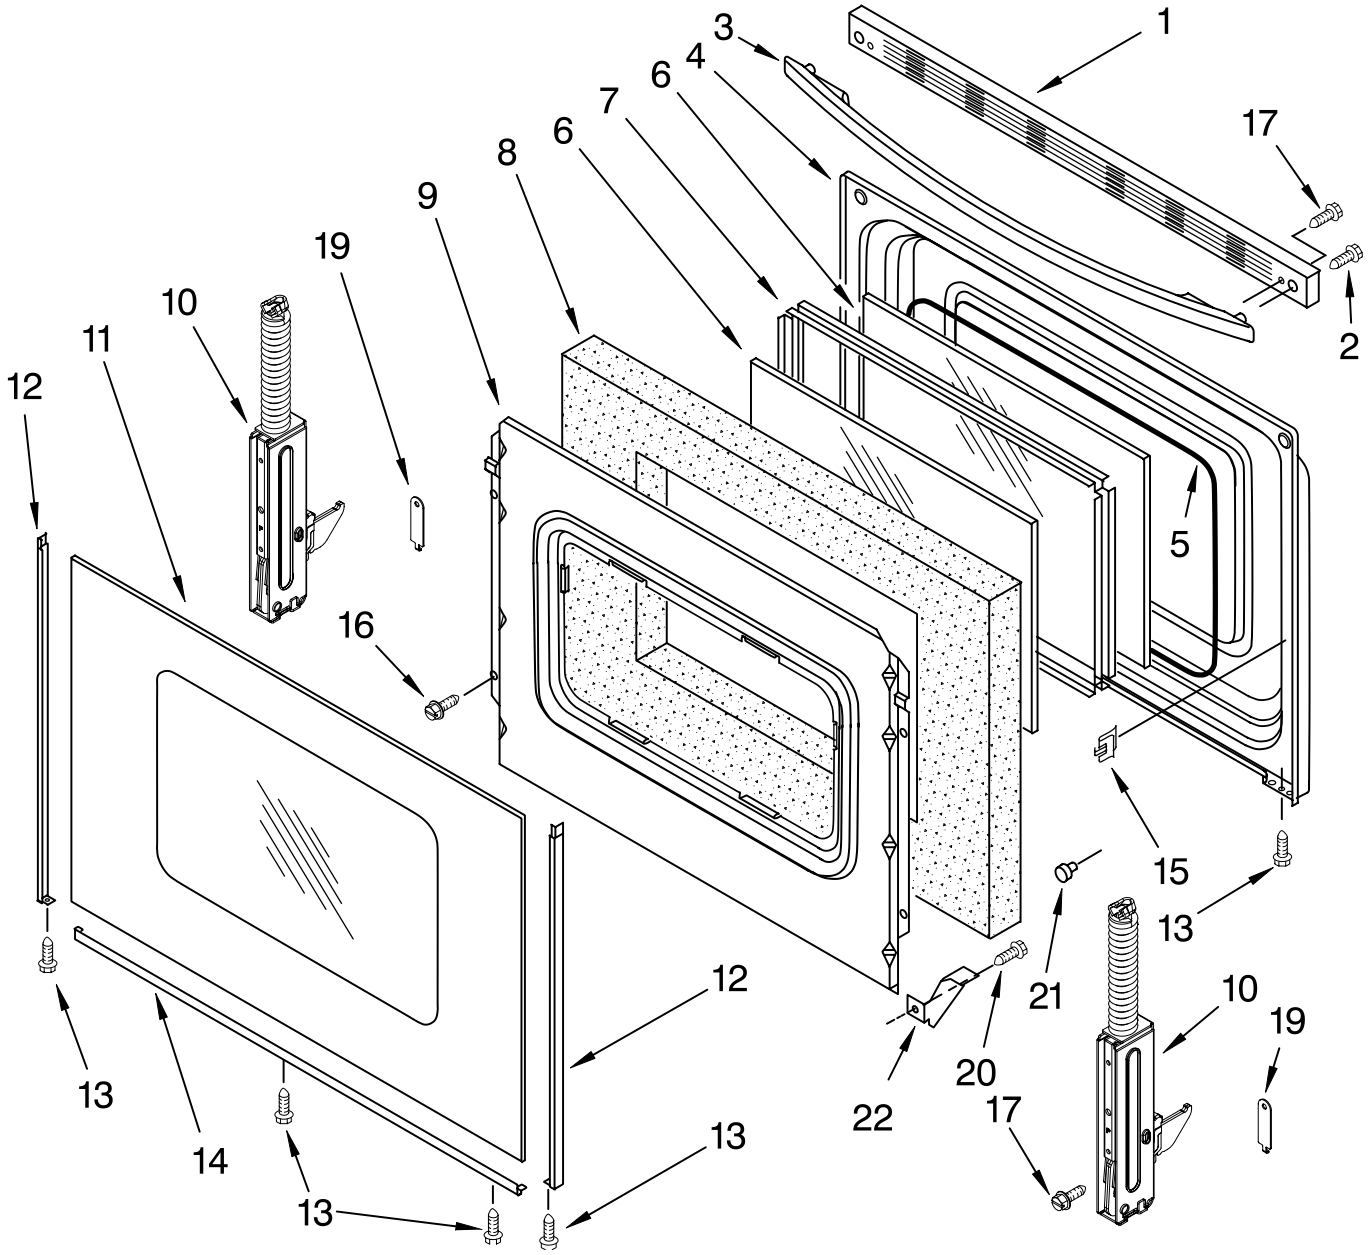

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	9762391	Black
	9761975	White
	9761976	Biscuit
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761984	Biscuit
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761493	Hinge, Door (2)
11		Glass, Outer
	9762480	Black
	9762479	White
	9762481	Biscuit
12		Trim, Side
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523166	White Left Hand
	8523172	White Right Hand
	8523167	Biscuit Left Hand
	8523173	Biscuit Right Hand
13	3196160	Screw
14		Trim, Lower
	8523177	Black
	8523175	White
	8523178	Biscuit
15	3196025	Clip, Glass (4)
16	W10031790	Screw
17	W10031780	Screw
19	9761517	Clip, Dr Mntg (2)
20	3196165	Screw
21	3195809	Bumper, Door (2)
22	3196794	Bracket, Window(2)

OPTIONAL PARTS

For Models: RF264LXSQ0, RF264LXST0, RF264LXSB0
(Designer White)(Designer Biscuit)(Black)

Illus. No.	Part No.	DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass
4396923	Broiler Pan Assy

ANTI−TIP KIT

W10017440	Anti−Tip Kit

WIRING HARNESS PARTS

9762952	Harness, Wire (Main)
9762428	Harness,Wire Door Switch/Sensor
311227	Wire, Ground
3196154	Screw
313660	Clip, Wire Ground
3196173	Screw

Miscellaneous

3196897	Pin Kit−Dr Removal